


How to use IR Remote


Infrared Remote triggers work in Stand Alone and in Live when the option “Get Stand Alone Triggers” is ON.

Previous Remote Control Unit (Before 2022)

Functioning for Interfaces without Mode and older interfaces

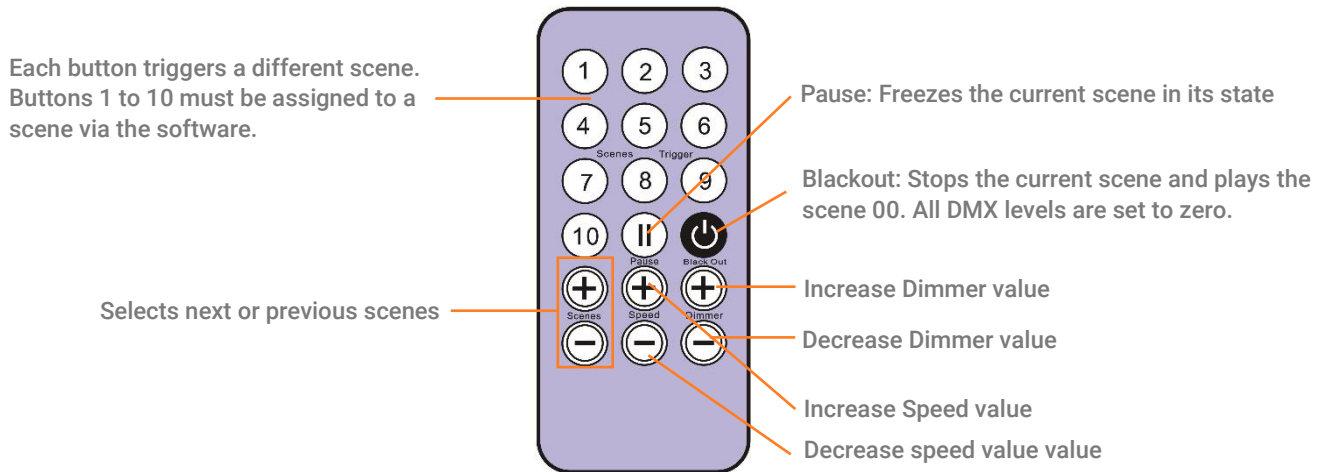


Functioning for Interfaces with Modes

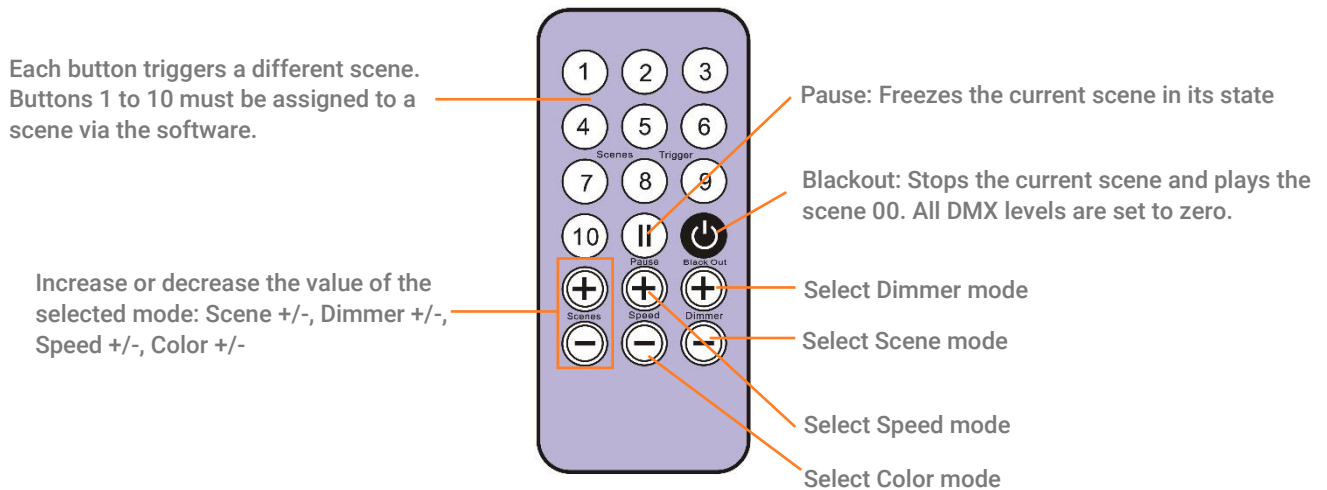


New Remote Control Unit (2022)

Functioning for Interfaces without Mode and older interfaces

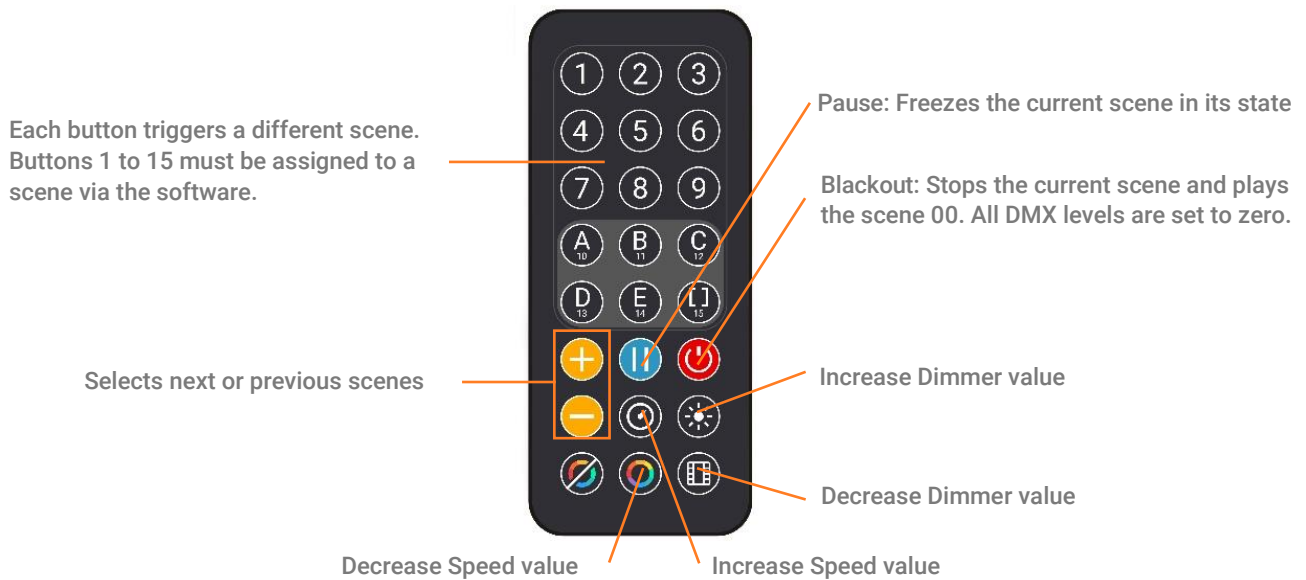

Functioning for Interfaces with Modes

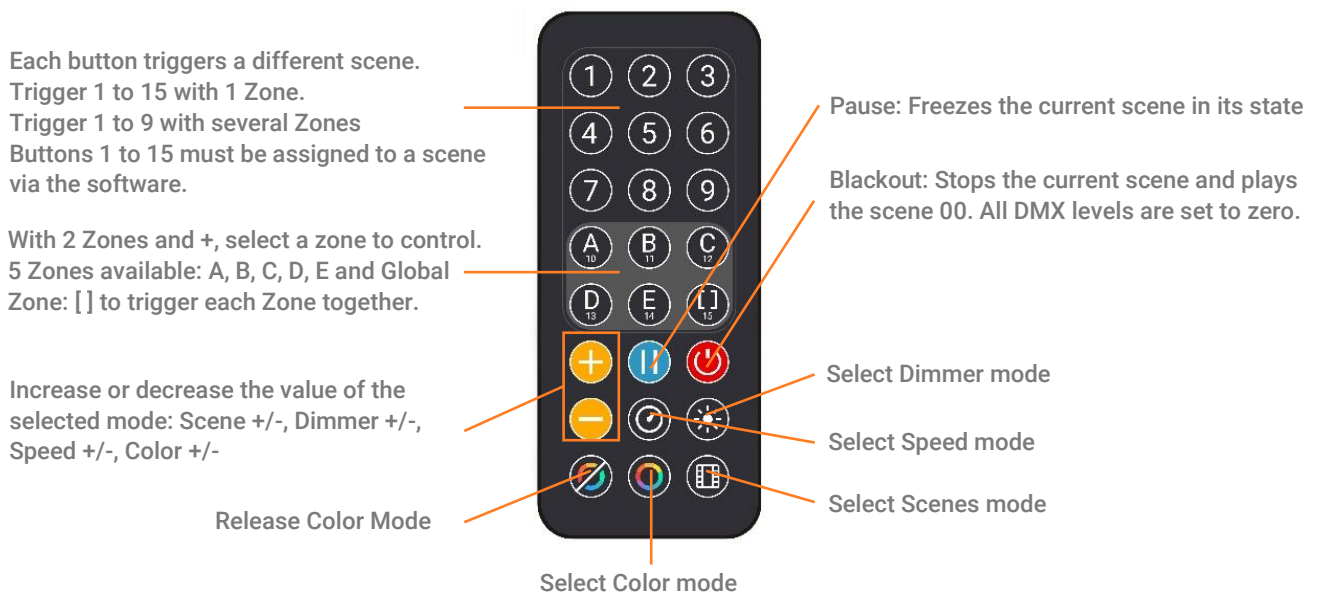

Functions descriptions

Scene +/-: Each push selects the next or previous scene of the current Zone. Scene are play immeditely.

Master Dimmer: Increases or decreases the RGB, CMY and dimmer channels of the current zone. The CMY, RGB, Dimmer channels are defined in the Profile of the fixture and the stand-alone mode.

Scene Speed: Increases or decreases the speed of the current scene in the current zone. A different speed can be chosen separately for each scene.

Zones: Choose a Zone (A,B,C,D,E or Global []). Then select a scene or mode to trig in the selected zone.

Modes: Select a Mode from Speed, Dimmer, Color or Scenes, then use +/- to change values.

IR Codes

